

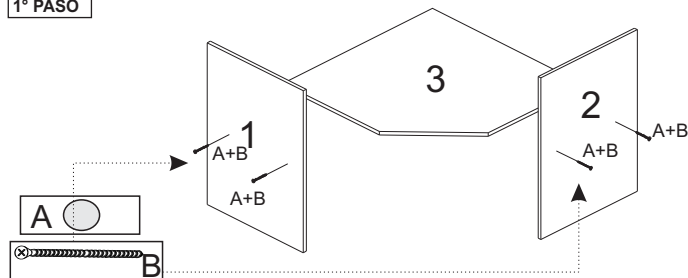



1º PASSO
1º STEP
1º PASO

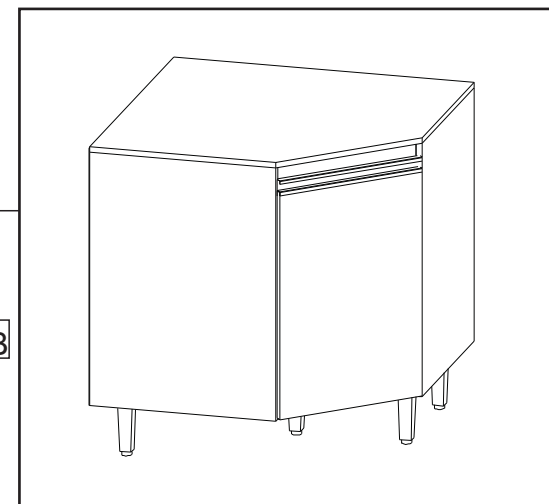


2º PASSO
2º STEP
2º PASO

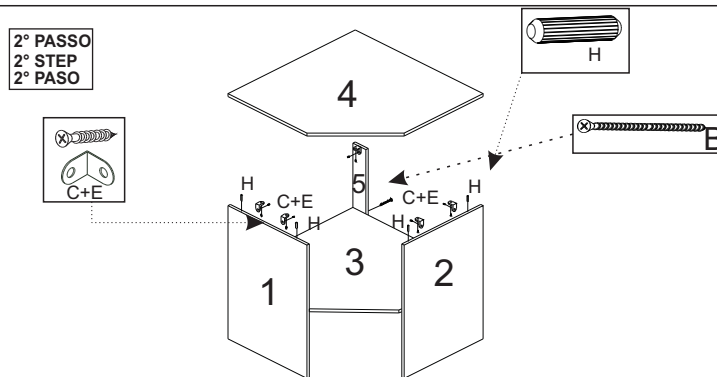

3º PASSO
3º STEP
3º PASO

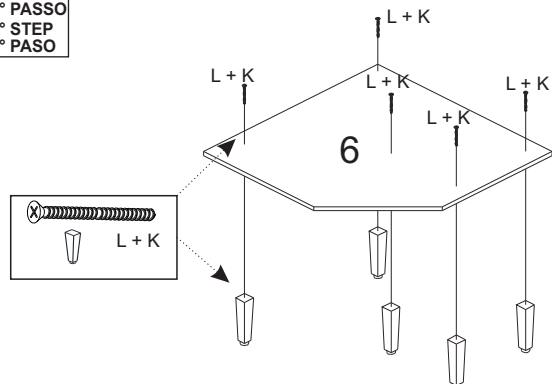


4º PASSO
4º STEP
4º PASO

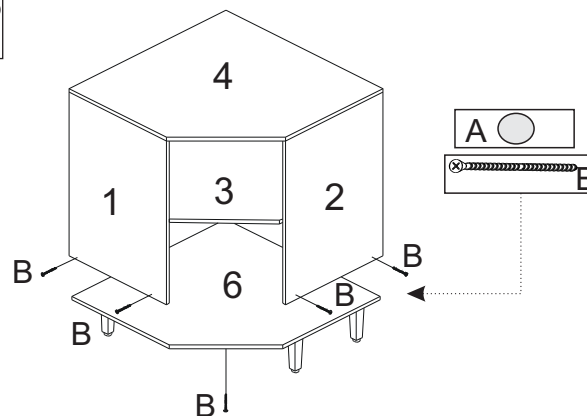


FERRAGENS / HARDWARE / EQUIPOS

A	08	TAPA FURO HOLE COVER TAPA DEL AGUJERO	
B	11	PARAFUSO 4 X 40 SCREW 4 X 40 TORNILLO 4 X 40	
C	29	PARAFUSO 3,5 X 14 SCREW 3,5 X 14 TORNILLO 3,5X14	
D	02	DOBRADIÇA 45Z HINGE 45Z BISAGRA 45Z	
E	05	CANTONEIRA Corner iron Hierro de esquina	
G	50	PREGO 10 X 10 NAIL 10 X 10 CLAVO 10 X 10	
H	04	CAVILHA PEG CLAVIJA	
I	02	BASE CANTONEIRA MENOR SMALLER CORNER BASE BASE DE ESQUINA MÁS PEQUEÑA	
J	01	PUXADOR PERFIL HANDLE PROFILE MANEJAR PERFIL	
K	05	PÉS SAN DIEGO SAN DIEGO FEET PIES DE SAN DIEGO	
L	05	PARAFUSO 5 X 40 SCREW 5 X 40 TORNILLO 5 X 40	

5º PASSO
5º STEP

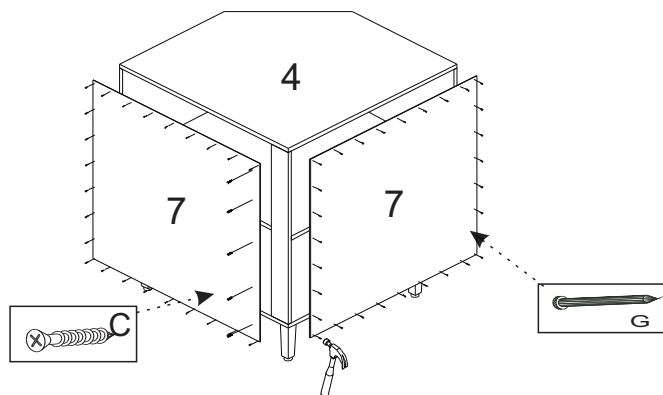

6º PASSO
6º STEP
6º PASO

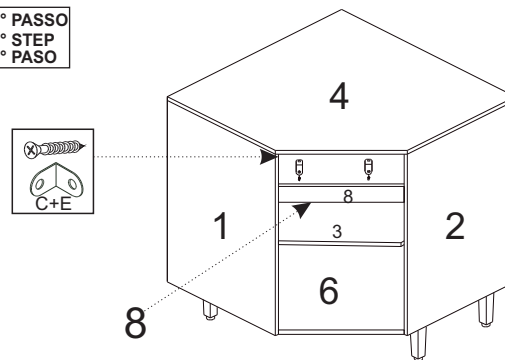

7º PASSO
7º STEP
7º PASO

