


BALCÃO COOK TOP LAVINIA

MANUAL DE MONTAGEM


ASSEMBLY INSTRUCTIONS

INSTRUCCIONES DE MONTAJE


REF.: 966

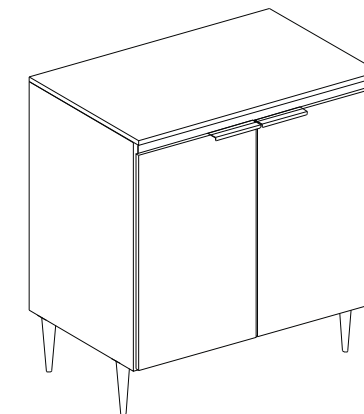


1º PASSO
1º STEP
1º PASO

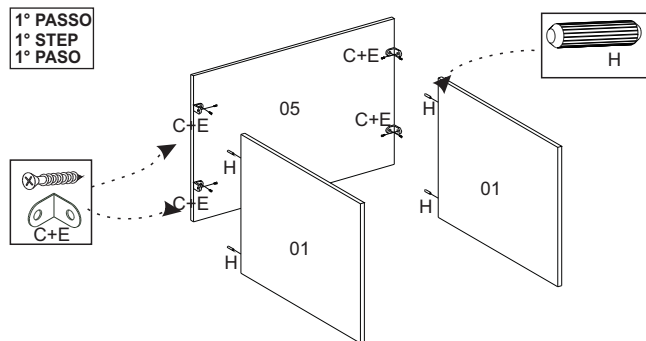


2º PASSO
2º STEP
2º PASO

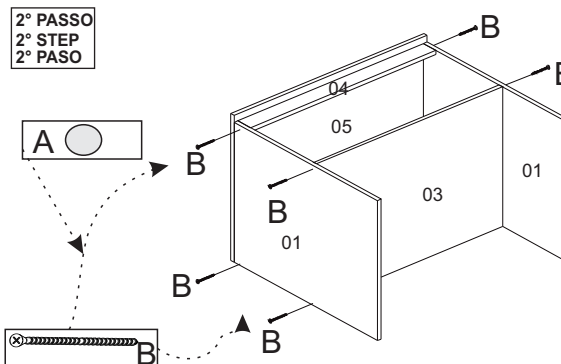


3º PASSO
3º STEP
3º PASO

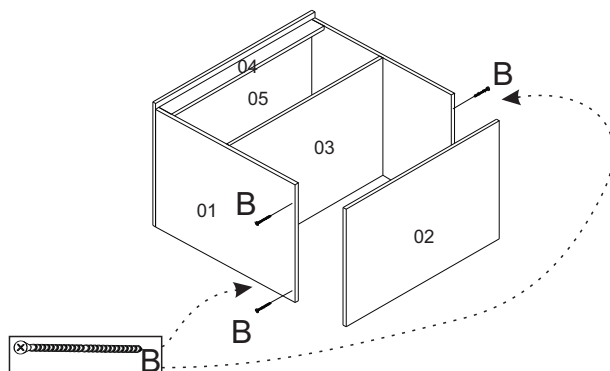


4º PASSO
4º STEP
4º PASO

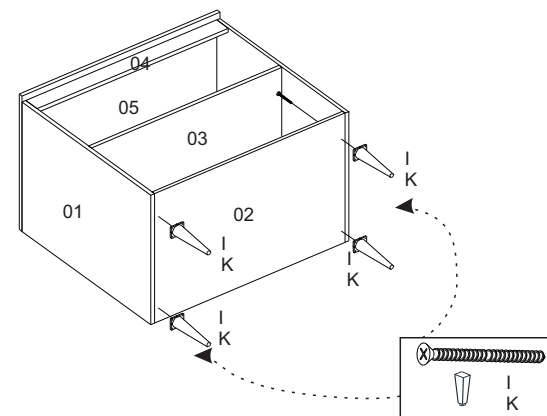

5º PASSO
5º STEP
5º PASO

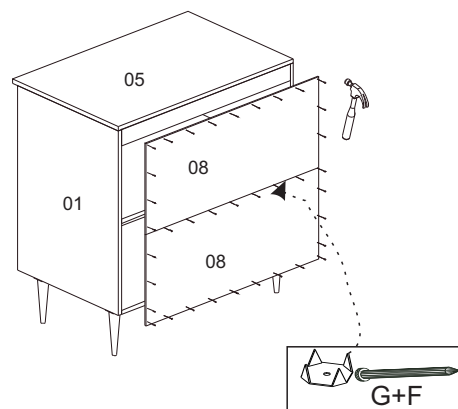

6º PASSO
6º STEP
6º PASO

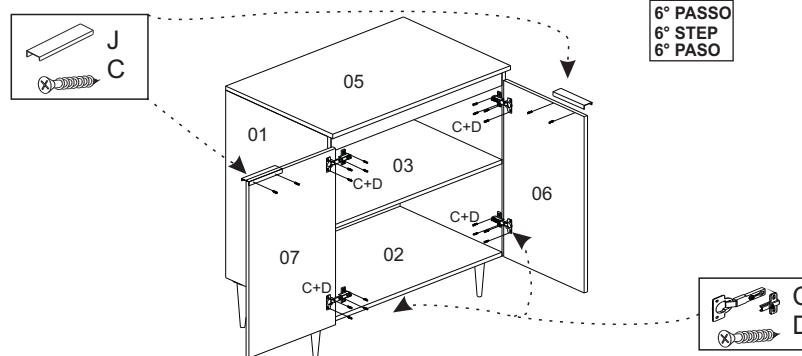

FERRAGENS / HARDWARE / EQUIPOS

A	12	TAPA FURO HOLE COVER TAPA DEL AGUJERO	
B	00	PARAFUSO 4 X 40 SCREW 4 X 40 TORNILLO 4 X 40	
C	42	PARAFUSO 3,5 X 14 SCREW 3,5 X 14 TORNILLO 3,5X14	
D	04	DOBRADIÇA SUPER ALTA 35 SUPER HIGH HINGE 35 BISAGRA SUPER ALTA 35	
E	04	CANTONEIRA Corner iron Hierro de esquina	
F	06	FIXADOR DE FUNDO BACKGROUND FIXER FIJADOR INFERIOR	
G	30	PREGO 10 X 10 NAIL 10 X 10 CLAVO 10 X 10	
H	04	CAVILHA PEG CLAVIJA	
I	12	PARAFUSO 4 X 40 SCREW 4 X 40 TORNILLO 4 X40	
J	02	PUXADOR PARIS HANDLE PARIS MANEJAR PARIS	
K	04	PÉS SAN DIEGO SAN DIEGO FEET PIES DE SAN DIEGO	
L	04	PARAFUSO 5 X 40 SCREW 5 X 40 TORNILLO 5 X 40	