



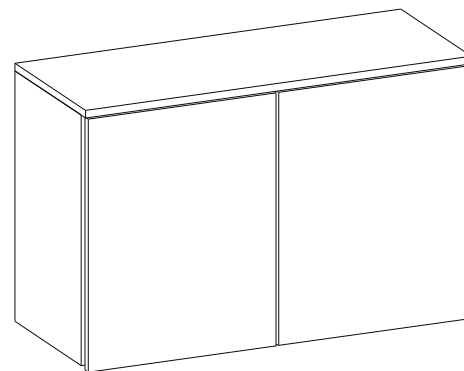


FERRAGENS / HARDWARE / EQUIPOS

A	08	TAPA FURO HOLE COVER TAPA DEL AGUJERO	
B	12	PARAFUSO 4 X 40 SCREW 4 X 40 TORNILLO 4 X 40	
C	30	PARAFUSO 3,5 X 14 SCREW 3,5 X 14 TORNILLO 3,5X14	
D	04	DOBRADIÇA SUPER ALTA 35 SUPER HIGH HINGE 35 BISAGRA SUPER ALTA 35	
E	02	SUORTE AÉREO AIR SUPPORT APOYO AÉREO	
F	06	FIXADOR DE FUNDO BACKGROUND FIXER FIJADOR INFERIOR	
G	40	PREGO 10 X 10 NAIL 10 X 10 CLAVO 10 X 10	
H	02	BUCHA BUSH	
I	02	SCREW 5 X 50 TORNILLO 5 X 50	


1° PASSO
1° STEP
1° PASO

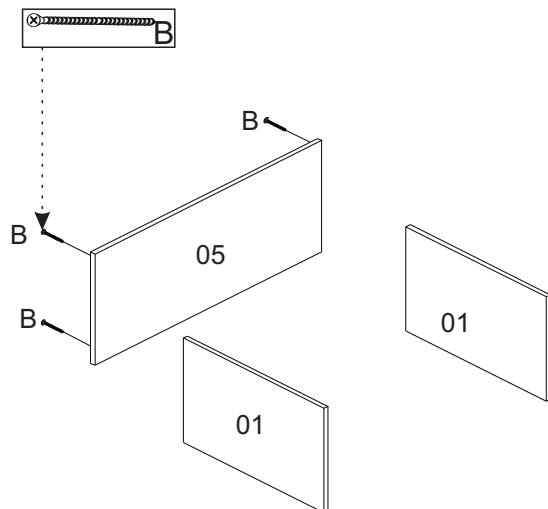



2° PASSO
2° STEP
2° PASO

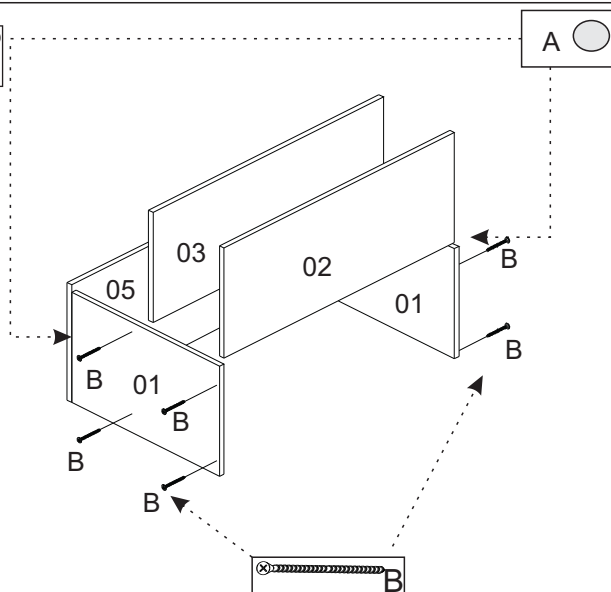

3° PASSO
3° STEP
3° PASO

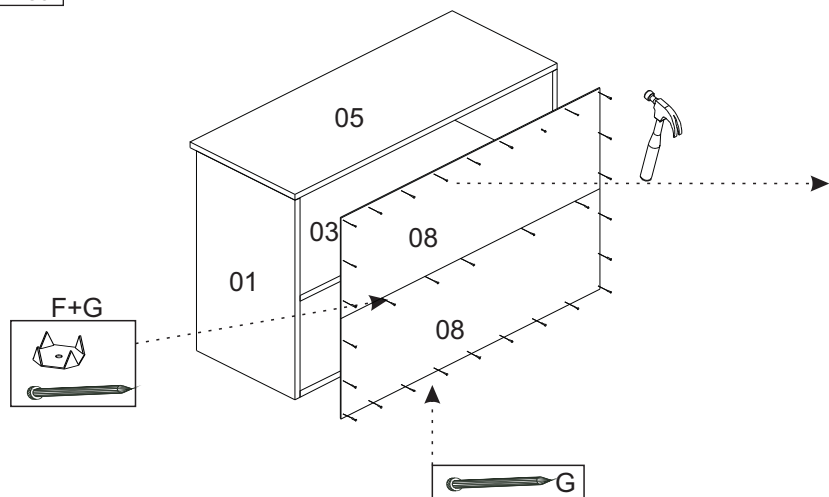

4° PASSO
4° STEP
4° PASO

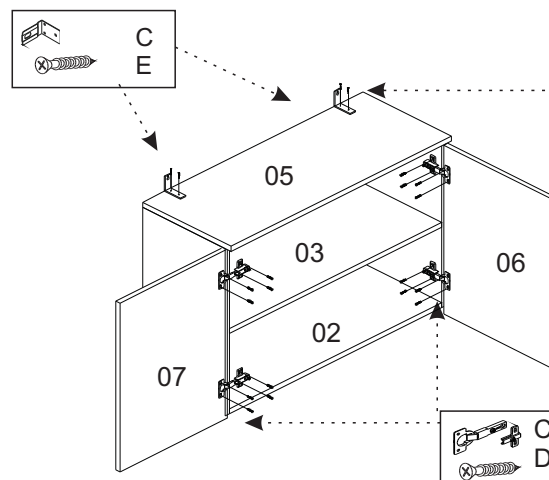

FIXAR NA PAREDE
FIX TO THE WALL
FIJAR A LA PARED