




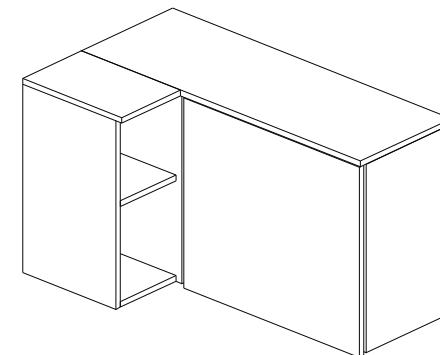


1º PASSO  
1º STEP  
1º PASO

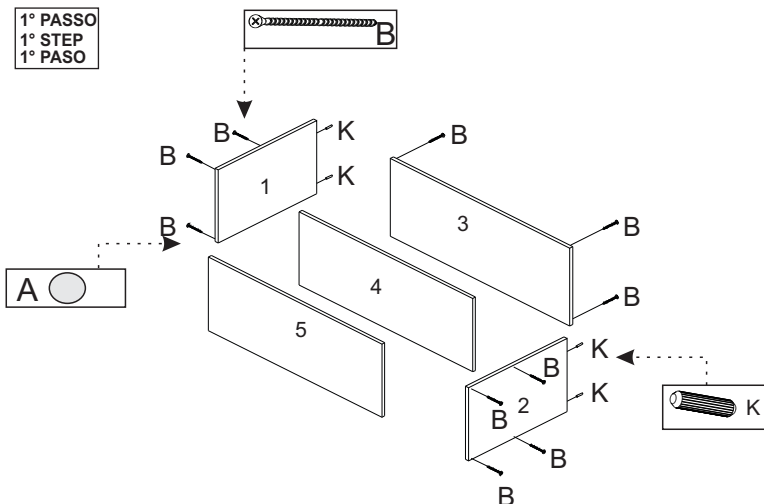


3º PASSO  
3º STEP  
3º PASO

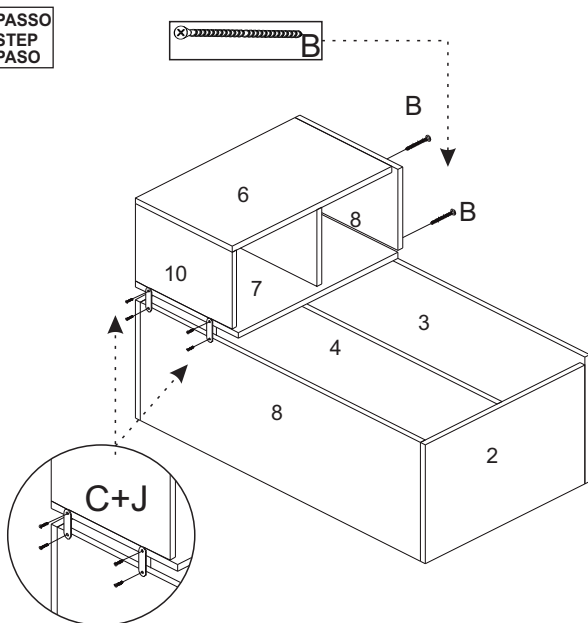


2º PASSO  
2º STEP  
2º PASO

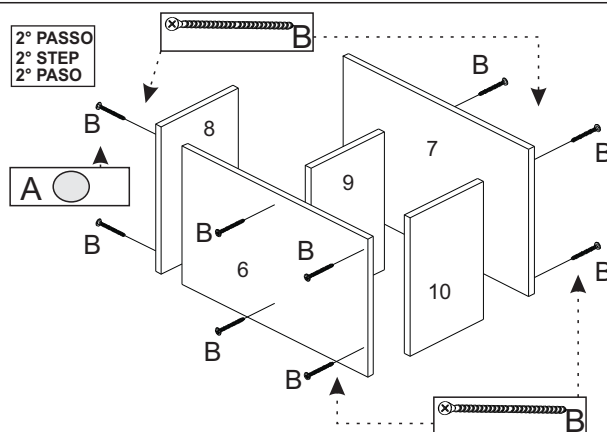

4º PASSO  
4º STEP  
4º PASO

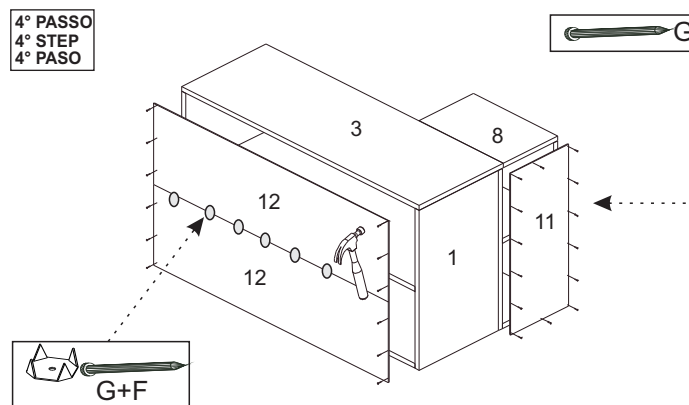


5º PASSO  
5º STEP  
5º PASO

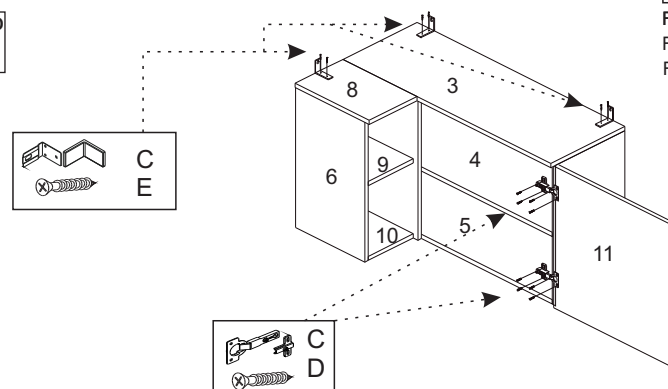

**FERRAGENS / HARDWARE / EQUIPOS**

|   |    |                                                                         |  |
|---|----|-------------------------------------------------------------------------|--|
| A | 08 | TAPA FURO<br>HOLE COVER<br>TAPA DEL AGUJERO                             |  |
| B | 24 | PARAFUSO 4 X 40<br>SCREW 4 X 40<br>TORNILLO 4 X 40                      |  |
| C | 25 | PARAFUSO 3,5 X 14<br>SCREW 3,5 X 14<br>TORNILLO 3,5X14                  |  |
| D | 02 | DOBRADIÇA SUPER ALTA 35<br>SUPER HIGH HINGE 35<br>BISAGRA SUPER ALTA 35 |  |
| E | 03 | SUPORTE AÉREO<br>AIR SUPPORT<br>APOYO AÉREO                             |  |
| F | 08 | BACKGROUND FIXER<br>FIJADOR INFERIOR                                    |  |
| G | 60 | PREGO 10 X 10<br>NAIL 10 X 10<br>CLAVO 10 X 10                          |  |
| H | 03 | BUCHA<br>BUSH<br>COJINETE                                               |  |
| I | 03 | PARAFUSO 5 X 50<br>SCREW 5 X 50<br>TORNILLO 5 X50                       |  |
| J | 02 | SUPORTE 04.04.067<br>SUPPORT<br>APOYO                                   |  |
| K | 04 | CAVILHA 6 X 30<br>PEG<br>CLAVIJA                                        |  |



FIXAR NA PAREDE  
FIX TO THE WALL  
FIJAR A LA PARED