

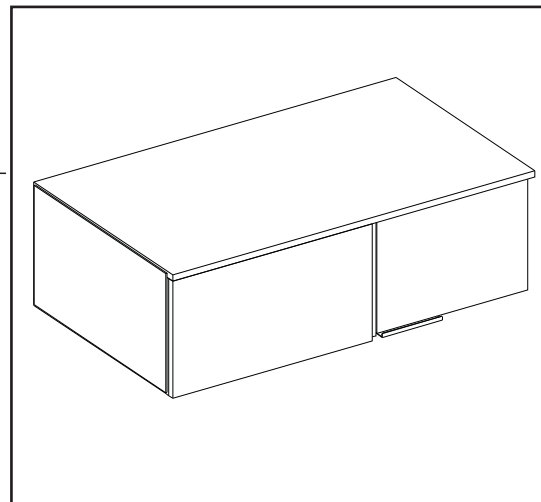



1º PASSO
1º STEP
1º PASO

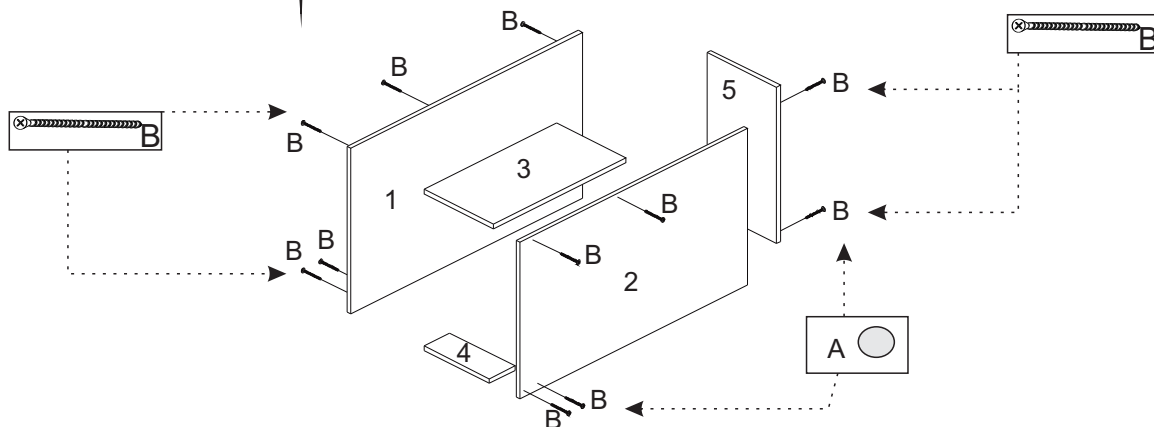


2º PASSO
2º STEP
2º PASO

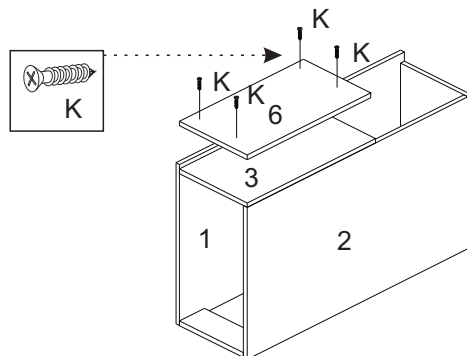



3º PASSO
3º STEP
3º PASO

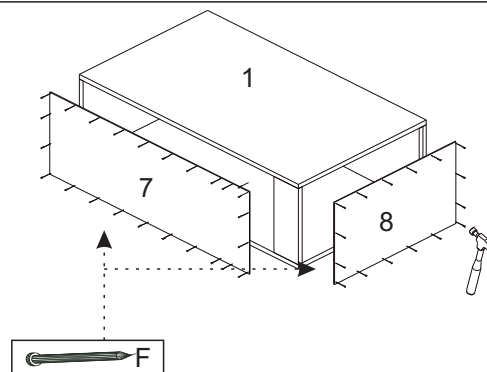

4º PASSO
4º STEP
4º PASO

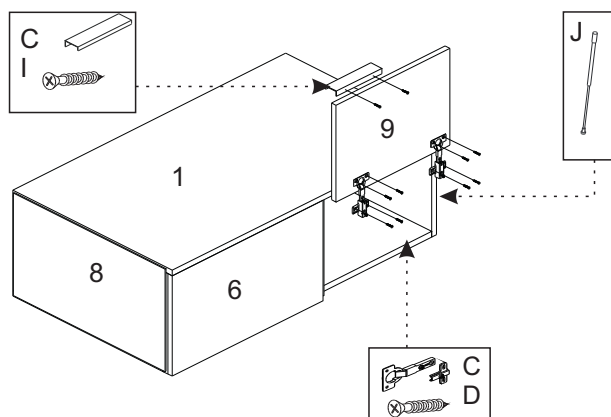

5º PASSO
5º STEP
5º PASO

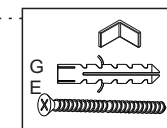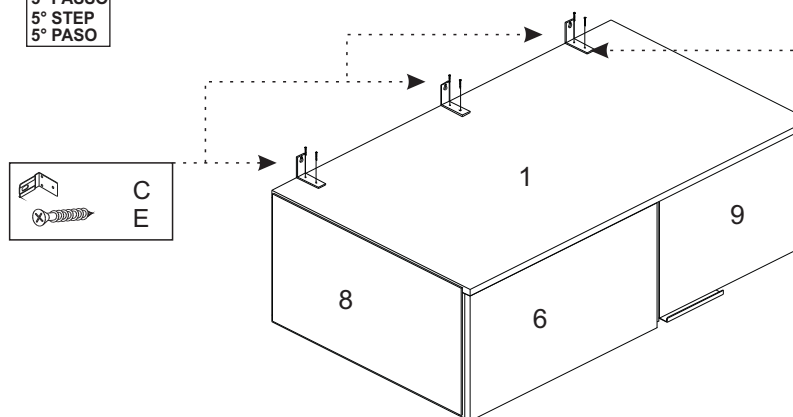

FIXAR NA PAREDE
FIX TO THE WALL
FIJAR A LA PARED

FERRAGENS / HARDWARE / EQUIPOS

A	13	TAPA FURO HOLE COVER TAPA DEL AGUJERO	
B	12	PARAFUSO 4 X 40 SCREW 4 X 40 TORNILLO 4 X 40	
C	22	PARAFUSO 3,5 X 14 SCREW 3,5 X 14 TORNILLO 3,5X14	
D	02	DOBRADIÇA SUPER ALTA 35 SUPER HIGH HINGE 35 BISAGRA SUPER ALTA 35	
E	03	SUPORTE AÉREO AIR SUPPORT APOYO AÉREO	
F	10	PREGO 10 X 10 NAIL 10 X 10 CLAVO 10 X 10	
G	03	BUCHA BUSH COJINETE	
H	03	PARAFUSO 5 X 50 SCREW 5 X 50 TORNILLO 5 X 50	
I	01	PUXADOR PARIS HANDLE PARIS MANEJAR PARIS	
J	01	PISTÃO A GÁS GAS PISTON PISTÓN DE GAS	
K	04	PARAFUSO 3,5 X 25 SCREW 3,5 X 25 TORNILLO 3,5X25	